

OPERATING AND INSTALLATION MANUAL

RANGEHOOD SERIES



IMPORTANT: TO AVOID INJURY OR DAMAGE, IT IS ESSENTIAL THAT YOU READ THESE INSTRUCTIONS BEFORE INSTALLATION AND USE.

PLATINUM

Contents

Caring for the environment	3
Warning and safety instructions	4
Modes of operation	5
Operating your appliance	6
Cleaning your appliance	7
Installation - preparation	8
Installation	9
Maintenance	10
Electrical connection	11
Technical data	12
Warranty and after sales service	13

Caring for the environment

Disposal of the packing material

Please ensure that the packing materials that protect your appliance are disposed of correctly. Where possible we have endeavoured to select materials that are environmentally friendly and can be easily recycled.

To ensure the safety of young children and babies please keep all packing materials out of their reach as there is a risk of suffocation.

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment.

They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

Please dispose of it at your local community waste collection / recycling centre or contact your Dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person.

Warning and safety Instructions

This appliance is intended for domestic use only - *excluding outdoor kitchens*.

This appliance complies with all of the relevant local and national standards. Inappropriate use can lead to personal injury and cause damage to property.

To avoid risk of injury or damage please read these instructions carefully before installing and operating this appliance.

It is important to keep these instructions in a safe place for future reference and to ensure that all users are familiar with the operations and safety precautions with this appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Young children should be supervised to ensure that they do not play with the appliance .

Please be aware on the cooker hood the halogen lamps may get very hot during use and the may retain their heat for some time after the unit is switched off.

There should be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels.

It is important to read the information provided about cleaning of your appliance, methods and frequency.

There is a fire risk if the cleaning procedures are not adhered to.

Do not flambé under the rangehood.

Exhaust air must not be discharged into an existing flue which is used for exhausting fumes from the appliance burning gas or other fuels.

The minimum distance between the hob surface and the lowest part of the rangehood is 600mm. This distance shall be at least 650mm, if the rangehood is installed over a gas hob. If the instructions for the hob specify a greater distance this must taken into account.

Due attention should be given to ensure that any applicable regulations concerning the discharge of the exhaust are adhered to.

If the supply cord of this appliance is damaged, it must only be replaced by the manufacturer or it's service agent or a similarly qualified person in order to avoid a hazard.

Modes of operation

The rangehood can be either

... ducted

This method extracts the cooking fumes from your kitchen and directs them outside. The metal filters help to remove the grease from the air prolonging the life of the motor.

This method of installation is the preferred method.

... recirculated

Where ducting is not possible your rangehood can be recirculated. The cooking fumes are drawn firstly through the metal filter, removing the grease and then by the charcoal filter. The air is then recirculated back into your kitchen via the grilles in the top of flue cover.

Carbon filters are not supplied standard with your unit. They can be purchased thru your rangehood stockist.

Important: Carbon Filters **MUST** be replaced every 3-6 months (dependant on use and cooking style) to ensure that your rangehood performs to its full capabilities.

Operating your appliance

Electronic Controls

To turn the fan on

Press the required speed button once, the fan will turn on and run at the required speed. The light above the button will illuminate to indicate the selected speed.

To turn the fan off

Press the button under the illuminated light. The same button is used to turn the fan on and off.

To use the light

The light can be used by pressing the button above light symbol once. The light is switched off by pressing the same button again.

Push Button Controls

To turn the fan on

Press the required speed button once, the fan will turn on and run at the required speed. The selected button will remain depressed to indicate that it has been selected.

To turn the fan off

Press the first button (the stop button) the fan will then stop. This button is used to stop all modes.

To use the light

The light can be used by pressing the button above light symbol once. The light is switched off by pressing the same button again.

Cleaning your appliance

General Maintenance

IMPORTANT: Switch off and unplug the rangehood at the powerpoint before undertaking any cleaning or maintenance on the unit.

To prevent any surface damage never use any abrasive products or products that contain soda, acids, chlorides or solvents.

To clean the surface of the appliance use a mild detergent in warm water, with a soft non-abrasive cloth.

Only use a damp cloth as water could get into the appliance and cause damage.

Dry surface thoroughly after cleaning with a soft cloth to prevent marking of the surfaces.

Filter Maintenance

To ensure that the rangehood performs at its best, filters need to be cleaned monthly or with heavy use more frequently.

The filters can be cleaned using hot soapy water and a soft nylon brush or placed in a dishwasher.

NOTE: Cleaning the filters in the dishwasher may cause permanent discoloration of the surface. This does not in any way affect the performance of the filters.

Charcoal filters CANNOT be cleaned or reused. Replace filters every 3-6months dependant on use and cooking style. Please dispose of used filters responsibly.

NOTE: Oversaturated filters are a fire hazard so regular cleaning/replacement is a must.

Preparation for installation

Height of wall canopy

The chimney is telescopic and is designed for hood installations between 650 to 750 mm above the cooking surface.

Ascertain the desired installation height of the wall canopy.

Any installation above 750 mm will compromise the extraction performance.

For optimal efficiency, use smooth-wall, solid galvanized or plastic ducting for reduced noise and increased airflow.

Flexible ducting should only be used as a last resort (ie in difficult installations) and if used, ensure that it is pulled tight.

The smoother, straighter and shorter the ducting the quieter and more efficient the wall canopy will perform.

Preparing the wall canopy for installation

Please read all the instructions carefully before installing the wall canopy.

Remove the filters from the canopy to allow access to wall mounting holes.

To remove the filters, pull the relative catch, tilting it downwards until it disengages from the supports. Reverse these instructions when refitting the filters.

Prior to drilling any holes, check that the area behind the surface to be drilled is clear of any electrical cables or pipes etc.

Stainless steel/Iridium is very easily damaged during installation if abraded or knocked by tools.

Whenever possible, protect the top of the cooktop with cardboard or the like to prevent damage on installation.

Installation

Glass Canopies

1. Mounting to a stud is recommended. However if mounting to other wall types different fasteners will be required.
2. Position the canopy mounting bracket in the required position. Mark and drill the pilot holes. Screw the bracket to the wall, ensuring that the bracket is level as this will determine the final level of the rangehood.
3. Carefully position the rangehood body on the bracket.
4. Position the canopy mounting bracket in the required position. Mark and drill the pilot holes. Screw the bracket to the wall.
5. Attach the ducting to the rangehood and duct according to your requirements (external ducting or recirculating).
6. Install the flue covers and secure the top flue cover to the flue bracket with the provided screws.
7. Carefully place the glass over the body of the rangehood. Fasten the glass to the body with the 4 provided screws.
8. Refit the filters and power the unit.

T Canopies + Standard

1. Mounting to a stud is recommended. However if mounting to other wall types different fasteners will be required.
2. Position the canopy mounting bracket in the required position. Mark and drill the pilot holes. Screw the bracket to the wall, ensuring that the bracket is level as this will determine the final level of the rangehood.
3. Carefully position the rangehood body on the bracket.
4. Position the canopy mounting bracket in the required position. Mark and drill the pilot holes. Screw the bracket to the wall.
5. Attach the ducting to the rangehood and duct according to your requirements (external ducting or recirculating).
6. Install the flue covers and secure the top flue cover to the flue bracket with the provided screws.
7. Refit the filters and power the unit.

Maintenance

Light bulb replacement

(Halogen bulb 12 Volts/20 Watt)

1. Switch off the power to the canopy hood and allow the bulb to cool.
2. Use a small bladed screwdriver to prise off the light cover, taking care not to damage the surrounding material.
3. Use a cloth to remove the bulb.
4. Replace with a new bulb using a cloth. Do not touch the bulb with fingers.
5. Snap the cover back in place.

Electrical connection

All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety regulations.

Installation, repairs and other work by unqualified persons could be dangerous, for which the manufacturer cannot be held liable.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

The connection data is given on the data plate. This is visible when the grease filters have been removed. Ensure that this data matches the household mains supply.

Connection of this appliance should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the On-Off switch should be easily accessible after the appliance has been built in.

When switched off there must be an all-pole contact gap of 3 mm in the switch (including switch, fuses and relays according to EN 60335).

If the switch is not accessible after installation (depending on country), an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a suitable residual current device (RCD). Contact a qualified electrician for advice.

Important


This appliance is supplied for connection to an a.c. 230 V single phase 50 Hz supply.

The wires in the mains lead are coloured in accordance with the following code:

Green/Yellow = earth
Blue = neutral
Brown = live

WARNING:
THIS APPLIANCE MUST BE EARTHED

Technical data

Voltage	220 - 240 V
Frequency	50Hz
Rated motor input power	190W
Rated input power	230W
Illumination	≤ 20W + 20W
Suction capacity	≥ 700m ³ /h
Plug rating	10A
Test marks	 5364

Warranty and after sales service

Terms and Conditions

The Company agrees to repair, or at its option replace any part of this appliance which is proved at time of delivery, or within twenty-four (24) months to be defective through faulty materials or craftsmanship.

This warranty does not cover consequential damage or failure due to accident damage, impact, misuse or negligence. This protection is for normal indoor household use only within Australia, and shall not be extended to any loss suffered by or resulting from the non-operation of the appliance or part thereof.

Unauthorised alteration, modification or substitution of any parts of this appliance, installation or use of this appliance not in accordance with the instructions supplied herewith, will render this warranty void. Charcoal filters and light globes are not covered by this warranty.

Where the appliance is installed outside the normal servicing area of the nearest service centre or authorised agent of the warrantor, the purchaser is responsible for expenses incurred in sending the appliance to and from the service centre or agents premises, or for the agents travelling costs to the place of installation.

The company is not liable for freight concerning any of its products or parts thereof, either forwarded, collected or returned following repair at any of the company's or agents workshops. This remains the responsibility of the purchaser.

The warranty does not cover product malfunction due to faulty installation or operation.

In order for the purchaser to obtain the protection of this warranty the company reserves the right to obtain or be allowed access to proof of purchase, applicable to this appliance.

Should you require warranty service, please call **1300 500 050**

Spare parts & technical support:

tel: 02 8850 5058

fax: 02 8850 5098

email: spares@robinstuart.com



PLATINUM

www.platinumappliances.com.au

Alteration right reserved 2008

08.12.1.2009

